

# *Mini Hi-Fi Component System*

---



***Game SYNC***  
**M I X I N G**

*MHC-GX90D*  
*MHC-RV900D*  
*MHC-RV800D*  
*MHC-RV600D*

Dolby\* Digital , Pro Logic  
Surround , DTS\*\* , DTS Digital  
Surround

\* Dolby Laboratories 가

" Dolby " , " Pro Logic " -D  
Dolby Laboratories

\*\* Digital Theater Systems , Inc .

 
" DTS " " DTS Digital  
Surround " Digital Theater Systems,  
Inc.

가


ENERGY STAR®



ENERGY STAR®  
Sony Corporation  
ENERGY STAR®



1  
(CLASS 1 LASER)

 



:

TV

.

TV

TV

가

.

TV

.



display : OSD ( on - screen )

.



..... 8  
 ..... 9  
 ( MHC - GX90D  
 RV800D )..... 10

---

..... 11  
 R6 ( AA )  
 ..... 16  
 ..... 16

DVD/VIDEO CD/CD/MP3

..... 17  
 — / /  
 ..... 17  
 — ..... 20  
 — ..... 22  
 — ..... 23  
 MP3 ..... 25  
 DVD ..... 26  
 PBC VIDEO CD  
 ( Ver. 2.0 )  
 — PBC ..... 27

DVD/VIDEO CD/CD/MP3  
 ..... 28

— ..... 29  
 — ..... 29  
 — ..... 30  
 — ..... 31

..... 34  
 / / /  
 ..... 36  
 ( DVD )..... 37  
 ( DVD )..... 38

가  
 — /  
 ..... 38

---

..... 43  
 — ..... 44  
 — ..... 45  
 ( RDS )  
 ( ..... )..... 45

---

..... 47  
 ..... 47  
 — CD / /  
 ..... 48  
 .... 50

---

.....	51
.....	51
.....	52
( MHC - GX90D    RV800D	
).....	53
.....	53

---

—	.....	53
	.....	54

---

—	.....	56
—	.....	56
.....	57	
.....	57	
: 가		
( MHC - RV900D    RV600D		
).....	57	
—	.....	59
—	.....	59

---

.....	61
.....	62
.....	63
.....	63

---

.....	64
.....	68
.....	69

---

.....	69
.....	71
.....	74
.....	77
.....	78
.....	79



“ DVD VIDEO ”

- CD-ROM ( PHOTO CD )
- R/CD-RW : CD
- CD-Extra
- DVD-ROM
- DVD
- \* ISO ( International Standard Organization : )

- 가 DVD .
- ( : , ) .
- 가 .
- , 가

CD-RW DVD-R/DVD-RW CD-R/ 가

DVD

DVD



DVD

DVD TV  
 “ Playback prohibited by area limitations ( ) . ”

가  
 DVD  
 DVD 가  
 가



DVD VIDEO CD

DVD VIDEO CD

VIDEO CD  
 DVD 가  
 DVD

. DVD VIDEO CD

VIDEO CD

PBC\* VIDEO CD  
 (Ver. 1.1) PBC VIDEO  
 CD (Ver. 2.0) VIDEO CD  
 가

US  
 Macrovision  
 Corporation

---

가

---

PBC CD  
 VIDEO CD ( ).  
 (Ver. 1.1 )

---


PBC PBC VIDEO  
 VIDEO CD CD  
 (Ver. 2.0 ) TV

( )

Macrovision  
 Corporation  
 Macrovision Corporation  
 가

\* PBC = Play Back Control ( )

CD-R CD-RW

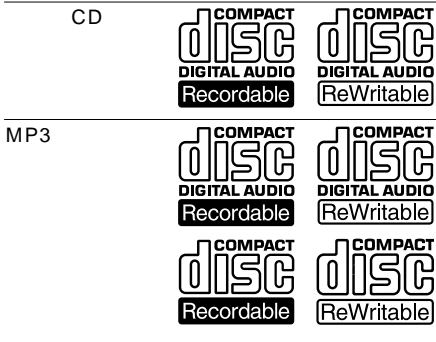

• CD-R/CD-RW

• CD-R/CD-RW

• CD CD-R/CD-RW

r  
TUNER/BAND ef (43, 44)  
R R

**A - O**


ALBUM +/- ws (19, 20, 26)  
 AUDIO wl (61)  
 CD SYNC ql (48, 50)  
 DIRECTION 8 (47, 48, 50, 58)  
 DISC 1 - 3 qs (18, 19, 20)  
 DISC SKIP/EX-CHANGE qd (17, 19, 23)  
 DISPLAY 8 (45, 53, 54, 55)  
 DVD eg (18, 20, 26, 27, 36, 48, 49)  
 DVD DISPLAY 0 (18, 24, 34, 36, 37, 38, 41, 55)  
 DVD MENU 8 (26)  
 DVD TOP MENU 8 (26)  
 ECHO LEVEL \*1 wk (58)  
 EFFECT ON/OFF 4 (51, 52)  
 ENTER qf (16, 18, 20, 24, 26, 27, 34, 36, 37, 38, 43, 46, 49, 50, 52, 55, 57, 59)  
 FM MODE 8 (45)  
 GAME ea (56, 61)  
 GAME EQ wd (51)  
 GAME MIXING wf eg (56)  
 GROOVE 3 ef (51)  
 KARAOKE PON \*1 ed (57)  
 MD (VIDEO) \*2 es ea (62)  
 MIC \*3 wj (57)  
 MIC LEVEL \*3 wk (57)  
 MOVIE EQ 9 (51) wk  
 MUSIC EQ 6 (51) wj  
 wh  
 wg

**P - õ**

P FILE wa (52)  
 PHONES qh  
 PLAY MODE 8 (18, 20, 49)  
 PTY\*\* 8 (46)  
 REC PAUSE/START w; (48, 50, 58)  
 REPEAT 8 (23)  
 SURROUND\*5 5 (53)  
 TAPE A/B ed (47, 48, 58)  
 TUNER MEMORY 8 (43)  
 TUNER/BAND ef (43, 44)  
 VIDEO e; (61)  
 VIDEO (MD) \*6 es (62)  
 VOLUME qg (33, 53, 59)  
 A wg (47)  
 B qk (47, 48, 49, 50, 58)  
 qa (17)

?/1 ( ) 1  
 v/V/b/B 7  
 Z OPEN/CLOSE qd  
 Z PUSH ( B ) qj  
 - m/M + ws  
 hH ws  
 ./> ws  
 X ws  
 x ws  
 Z PUSH ( A ) wh

\*1 MHC-RV900D ( )  
 RV600D ( )  
 \*2 MHC-GX90D  
 \*3 MHC-RV900D  
 RV600D  
 \*4  
 \*5 MHC-RV600D  
 \*6 MHC-GX90D

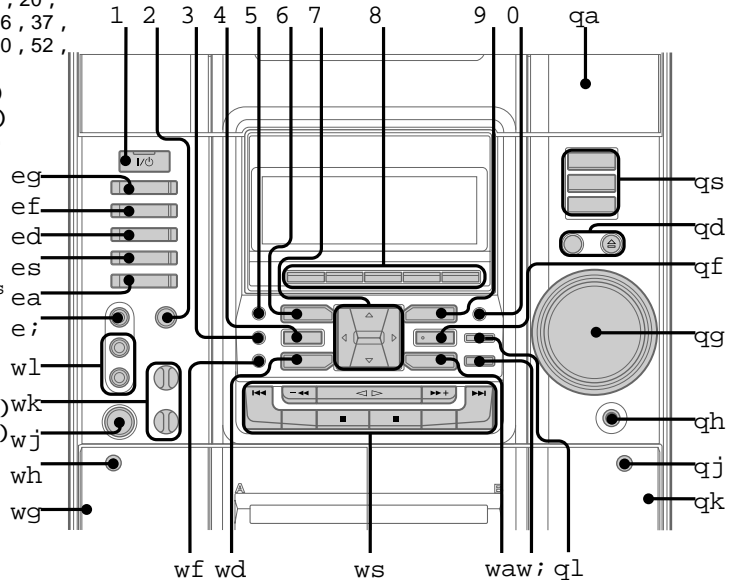




**A - O**

- ALBUM +/- wd wl (19, 20, 26)
- AMP MENU wa (57)
- ANGLE w; (37)
- AUDIO ed (35)
- CLEAR qf (20, 22, 24, 31)
- CLOCK/TIMER SELECT 2 (51, 60)
- CLOCK/TIMER SET 3 (16, 50, 59)
- DISC +/- wg wj (19, 20, 23)
- DISPLAY qa (45, 53, 54, 55)
- DVD rd (18, 20, 21, 26, 27, 28, 36, 48, 49)
- DVD DISPLAY qd (18, 24, 34, 36, 37, 38, 41, 55)
- DVD MENU ef (26)
- DVD SETUP ek (28, 33, 40)
- DVD TOP MENU ef (26)
- EFFECT ON/OFF es (51, 52)
- ENTER wk (16, 18, 20, 21, 24, 26, 27, 28, 33, 34, 36, 37, 38, 40, 43, 46, 49, 50, 52, 55, 57, 59)
- GAME 8 (56, 61)
- GAME EQ e; (51)
- GAME MIXING qi (56)
- GROOVE es (51)
- MD (VIDEO) 9 (62)
- MOVIE EQ e; (51)
- MULTI ROOM\* ea
- MUSIC EQ e; (51)
- NEXT eh (18, 27)

**P - ㅎ**

- P FILE ws (52)
- PLAY MODE ra (18, 20, 21, 49)
- PRESET +/- eh (43, 44)
- PREV eh (18, 27)
- REPEAT r; (23)
- RETURN o ej (27, 39, 41)
- SCAN/SLOW <⏮/⏭> qk (19)
- SLEEP 1 (59)
- SUBTITLE ql (38)
- SURROUND es (53)
- TAPE rf (47, 48)
- TUNER/BAND rs (43, 44)
- TUNING +/- eg (43, 45)
- TV ?/1 4 (15)
- TV CH +/- rg (15)
- TV/VIDEO 7 (15)
- TV VOL +/- 6 (15)
- VOL +/- wf (33, 53, 59)
- qs (19, 27, 39, 40, 42, 49)

- ?/1 ( ) 5
- x qg
- nN qh
- X qj
- M/m/< /, wh
- m eg
- M eg
- . eh
- > eh
- >10\* el
- \*
- .

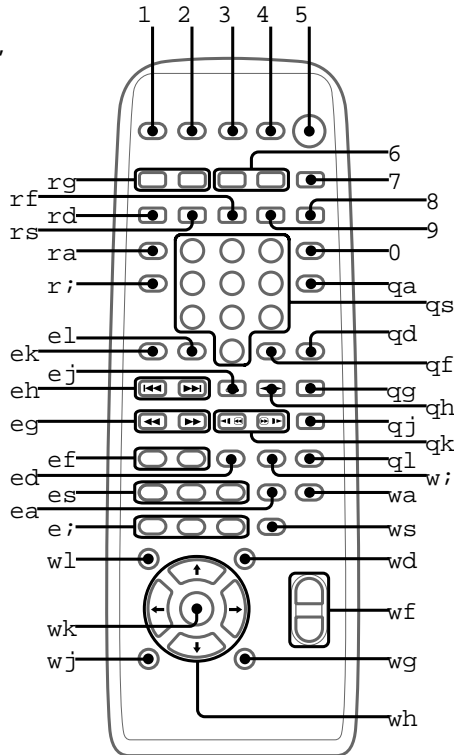


( MHC - GX90D RV800D )




A - ㅎ

ON/OFF 2 ( 53 )

1 ( 53 )

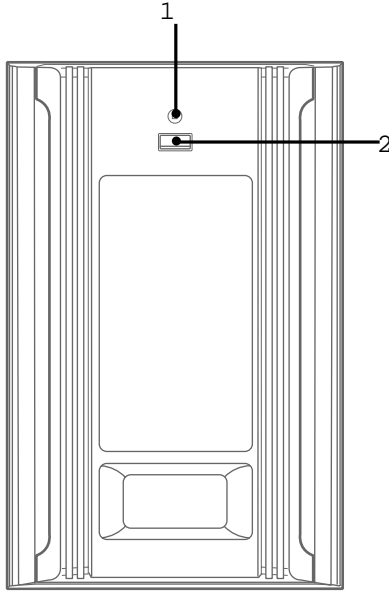

1 9

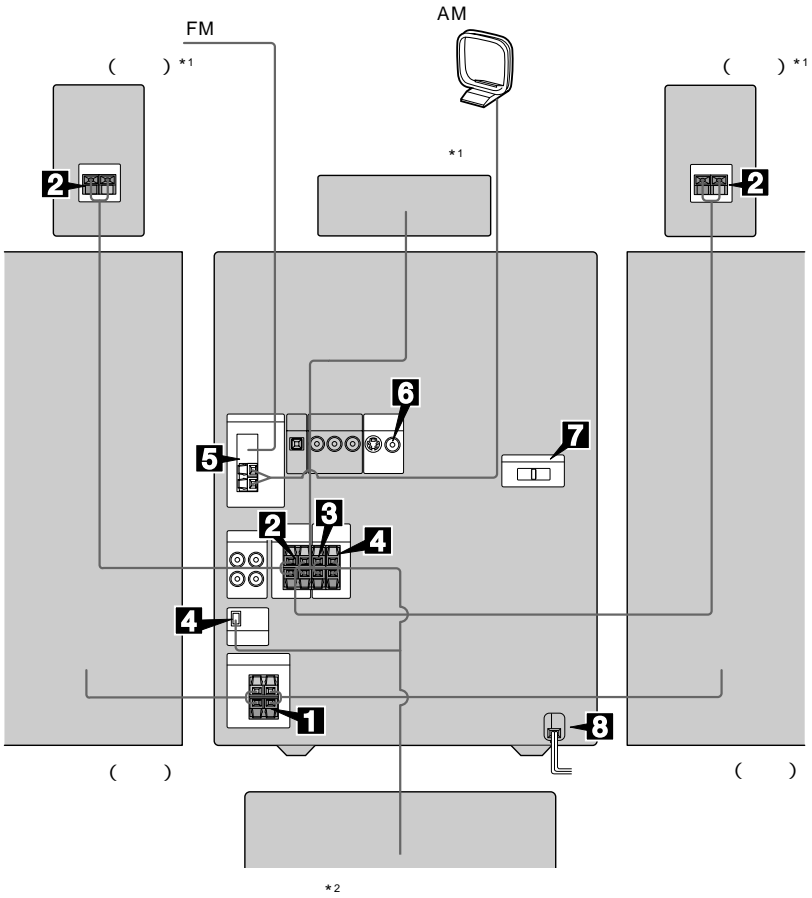


\*1 MHC - RV600D

\*2 MHC - GX90D RV800D

( )


1

### FRONT SPEAKER

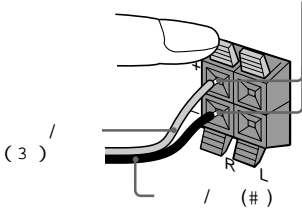


2

### REAR SPEAKER (MHC-RV600D )

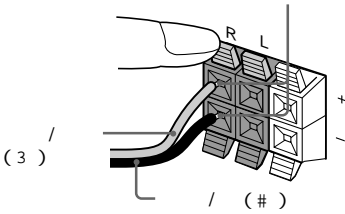


3

### CENTER SPEAKER (MHC-RV600D )


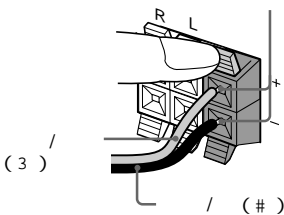


4


### (MHC-GX90D RV800D ) SUB WOOFER SUB WOOFER CONTROL

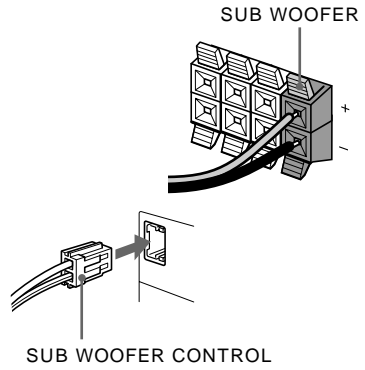

### 5 FM/AM AM

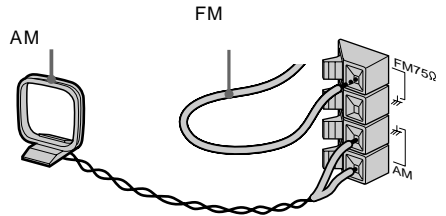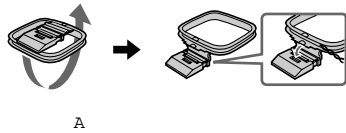


### B (MHC-RV800D ) FM

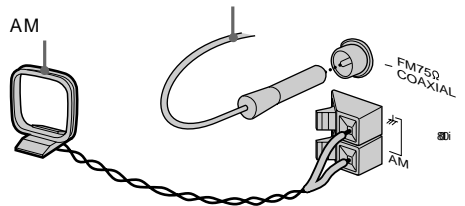

6

TV  
VIDEO OUT

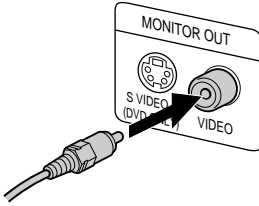

TV  
TV

9 ( TV )

PAL TV  
NTSC

3 NTSC , PAL

NTSC y PAL


1 ?/1

2 x ?/1

S VIDEO S- TV  
OUT (DVD )

7 가  
VOLTAGE SELECTOR

VOLTAGE SELECTOR

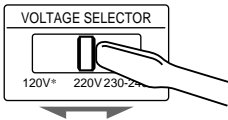

\* : 120 - 127 V

8

. ?/1


가

가

( 가 )

61

( )

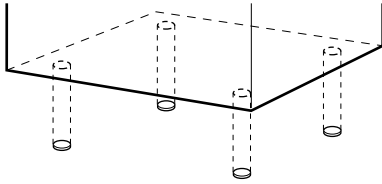


- 
- (71 “ ” ).
- TV
- \* TV
- 가
- 
- 가
- \* MHC - RV600D


( MHC - RV600D )

1

45

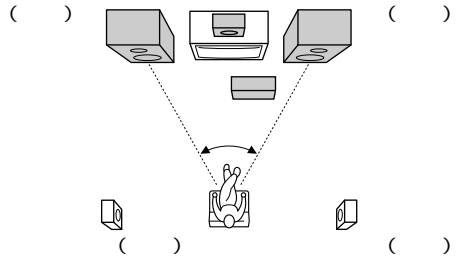


2

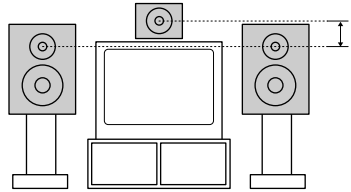

3

60 90 cm

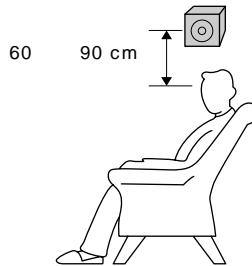

RV800D (MHC-GX90D)  
) (150 Hz)

Sony TV

TV	TV ?/1
TV	TV/VIDEO
TV	TV CH + -
TV	TV VOL + -

DVD 5.1  
33

가 가  
가

DVD


**1** ?/1  
DVD

**2** DVD "STANDBY"  
?/1 "LOCK"

**3**

( AA )

R6

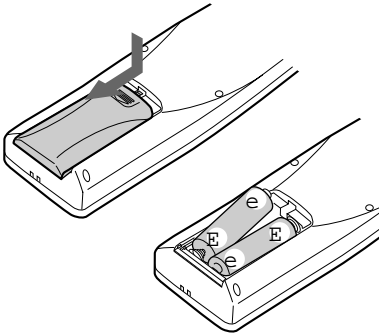

6

1 ?/1  
 2 CLOCK/TIMER SET

3 M m

4 ,  
 가

5 M m

6 ENTER  
 가

1 CLOCK/TIMER SET

2 M m  
 "CLOCK SET"  
 ENTER

3 3 6




MP3

. MP3 25  
 " MP3 "

1 z OPEN/CLOSE  
 가

2

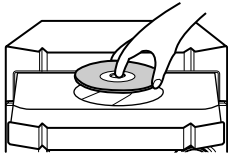


가 DISC  
 SKIP/EX-CHANGE

3 z OPEN/CLOSE


— / /

(DVD, VIDEO CD, CD MP3). DVD VIDEO CD


DVD :

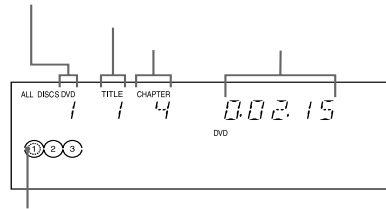

VIDEO CD :

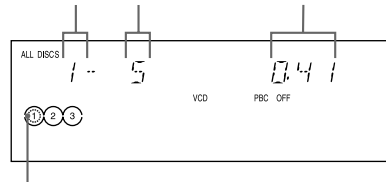


CD :

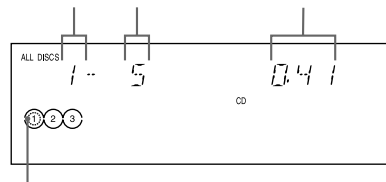

( )

MP3

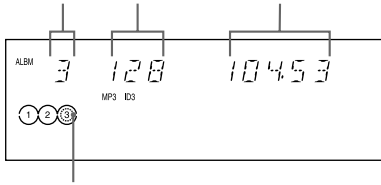

1 TV

TV

2 DVD

3

PLAY MODE

가

ALL DISCS	( )
1DISC	( )
ALBM	( ) MP3
ALL DISCS SHUF	( )*
1DISC SHUF	( )*
ALBM SHUF	( )* MP3
PGM	( )* (20 " )

\* DVD

4 DISC 1 - 3

DVD

가

hH

(

nN )

1 DISC , ALL DISCS ALBM

1 DVD DISPLAY

가

2 v v ( M m )

"PLAY MODE"

ENTER

3 v v ( M m )

ENTER

• MP3가

"ALBM" "ALBM SHUF" 가  
"1DISC" "1DISC SHUF" 가

• DVD "1DISC SHUF"  
"ALBM SHUF"

x	( )
x	x (22)
x	*1

> ( ) NEXT)

( ) > ( )  
PREV)(

M m

( \*2) hH ( nN )

DVD VIDEO CD  
, M m

1 ( ) t 2 ( )

MP3	3	ALBUM -
	+	
(	hH	SCAN/SLOW
(DVD/VCD	nN	▶▶*3
)		
	DISC 1 - 3	DISC SKIP/
		EX - CHANGE (
		DISC +/- )
DVD	DISC 1 - 3	(
		)
	DISC SKIP/EX -	
	CHANGE	
	Z OPEN/CLOSE	

• DVD VIDEO CD

• (MHC - GX90D 2 RV800D 가 ).

(

(MP3

ALBUM - +

)

10

1

0 10/0

2 ENTER

:

30 3 10/0

100 MP3 ENTER 1, 10/0

10/0 ENTER

\*1

\*2 MP3

\*3 VIDEO CD SCAN/SLOW

▶▶ 가 가



DVD

25

1 DVD

2


“ PGM ”  
PLAY MODE

3 DISC 1 - 3  
DISC + - )

4

>

( )

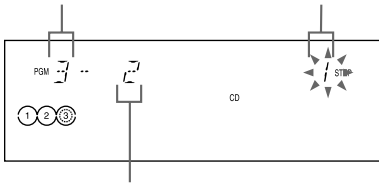

5 ENTER

6

가.

4 5

3 5

7

hH ( nN )

“ PGM ” “ SHUF ”  
PLAY MODE

2  
CLEAR

MP3

3

ALBUM - +

4

hH ( nN ) DVD


5

1 DVD


2 "PGM"

PLAY MODE


가

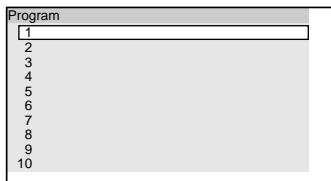

3 , M m

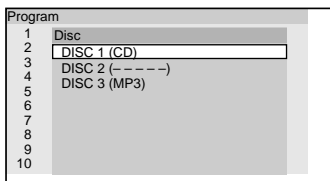

4 , 가 ( " DISC 1 " ).

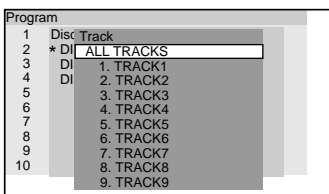

\* " ? " 가


x VIDEO CD CD

" 6 "

M /m

" 6 "

ENTER

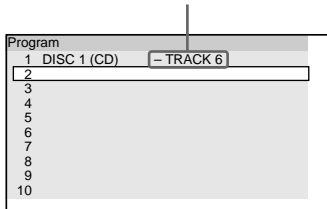

x MP3

" 2 "

" 3 "

M /m


" 2 "



M /m

" 3 "

ENTER

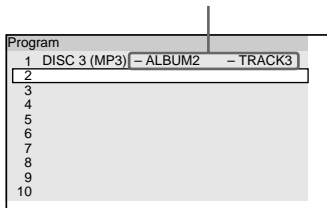

( )



6

3 5

7 nN

CLEAR	
PLAY MODE	
2	CLEAR

—

1

x

“RESUME” 가  
“RESUME”

2 hH

( nN )

1

“RESUME”

hH

(

x

nN

)

MP3

x

“REP 1”  
“PGM”

“REP 1”

nN



( )

CLEAR

1 DVD DISPLAY  
가

2 v v ENTER "REPEAT"

3  
x DVD  
• OFF :  
• ALL :  
• TITLE :  
\*  
• CHAPTER :

x OFF  
VIDEO CD/CD  
• OFF :  
• ALL :  
• TRACK : \*

x OFF  
MP3  
• OFF :  
• ALL :  
"CONTINUE (ALBUM)"  
가

• TRACK :  
x ON  
• OFF :  
• ALL :

\*" ALL DISCS SHUFFLE "  
" TITLE ", CHAPTER "  
" TRACK "

• "REPEAT"  
nN  
• "REPEAT"  
REPEAT  
• VIDEO CD PBC (27 )  
• DVD  
• ALL



# MP3

## MP3

MP3 (MPEG 1 Audio Layer -3)

1/10

가

CD-ROM, CD-R (가 CD)

CD-RW (가 CD)

MP3

ISO 9660\* 1

2

\* ISO 9660

CD-ROM

가

가

8.3 ( 1  
“.MP3”

)

2

31

8

가 ) ( 64

- ( )
- “MP3”
- MP3 “MP3”
- MP3 가
- MP3 /
- 가
- 가

MP3  
( )

MP3

MP3

1 DVD

2 ALBUM - +

4

3  
>

4 hH ( nN )

" " 20 " "

MP3

가

- VBR (variable bit rate) MP3

# DVD

DVD

DVD " "

DVD

DVD TOP MENU

DVD

DVD  
MENU

DVD

1 DVD

2 DVD TOP MENU DVD MENU

TV DVD 가

3 v/v/b/B ( M/m/</ , )

4 ENTER

# PBC VIDEO CD (Ver. 2.0)

— PBC

TV

1 DVD

2 hH ( nN )  
PBC VIDEO CD (Ver.  
2.0)

VIDEO CD PBC  
TV PBC 가

- VCD : VIDEO CD

- PBC : PBC VIDEO CD  
(Ver. 2.0) PBC

3 v v ( M m )

ENTER

4

x	
	NEXT
	PREV
가	
	RETURN o
가	
PBC	>
(Ver. 2.0)	
	ENTER
	(
	)
	ENTER
0	
10/0	

VIDEO CD  
3 "ENTER"  
가 "SELECT"



29-42

79


1 DVD

2 DVD SETUP

3 M m


ENTER

: "SCREEN SETUP"

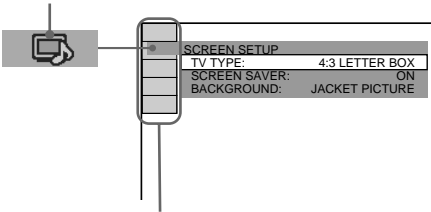


4 M m ENTER

: "TV TYPE"

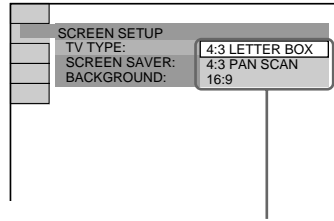

5 M m ENTER

: "4:3 PAN SCAN"

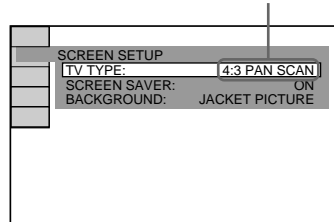


DVD SETUP

3 "RESET" 29-42  
"SETUP"  
("PARENTAL CONTROL" )

“ LANGUAGE SETUP ”

“ LANGUAGE SETUP ”

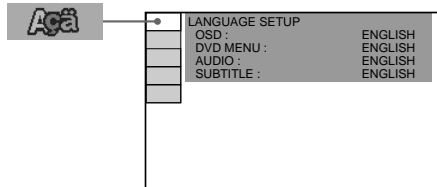

x OSD ( )

x DVD MENU ( DVD )  
DVD

x AUDIO ( DVD )

x SUBTITLE ( DVD )

\* “ DVD MENU ”, “ AUDIO ”  
“ SUBTITLE ” “ OTHERS t ”


(77

).  
“ OTHERS t ”  
(4 )가

DVD  
가  
(“ OSD ” ).

TV

“ SCREEN SETUP ”

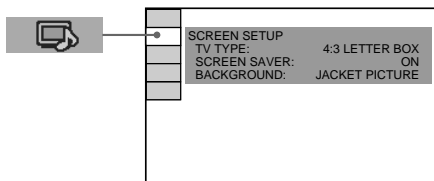


x TV TYPE ( DVD )  
TV

• 4:3 LETTER BOX : 4:3 TV

가




• 4:3 PAN SCAN : 4:3 TV

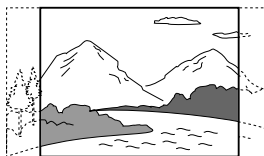

( )

- 16:9 :

TV  
TV

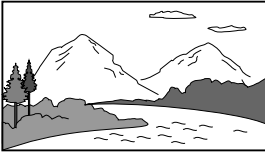

DVD " 4:3 PAN  
SCAN " " 4:3 LETTER BOX " ,

x SCREEN SAVER

15 15 CD  
가 ( )  
DVD

- ON :
- OFF :

x BACKGROUND

TV CD

- JACKET PICTURE :  
( )  
( CD - EXTRA )


" GRAPHICS "

- GRAPHICS :
- BLUE :
- BLACK :



—

" CUSTOM SETUP "

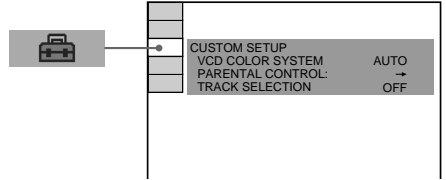

x VCD COLOR SYSTEM ( )  
VIDEO CD

- AUTO :  
PAL NTSC  
DUAL TV가  
AUTO
- PAL : NTSC  
PAL
- NTSC : PAL  
NTSC

( 13 TV ) .

x PARENTAL CONTROL ( DVD )

DVD

“ ( 40 ) ”

x TRACK SELECTION ( DVD )  
( PCM , DTS , MPEG )

DVD 가

• OFF :

• AUTO :

• “ AUTO ”  
“ LANGUAGE SETUP ”  
( 29 ) “ TRACK  
SELECTION ” “ AUDIO ”

• PCM , DTS , MPEG

PCM , DTS , MPEG

• DVD

가

“ AUTO ”  
DTS , MPEG

PCM ,

x SIZE

CENTER , REAR SUBWOOFER

FRONT

• YES

CENTER ( MHC - RV600D )


• YES :

• NONE :



—  
가

“ SPEAKER SETUP ”

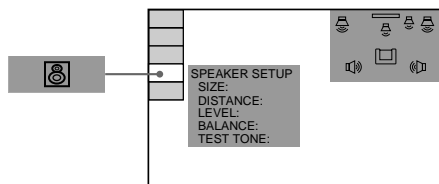

CLEAR

( )

REAR (MHC-RV600D )

- YES :
- NONE :

SUBWOOFER (MHC-GX90D RV800D )

- YES

- 가
- 가
- 가 DVD "SUBWOOFER"

"YES" 가

x DISTANCE (MHC-RV600D )

- FRONT : 0.9 15.0  
0.2
- CENTER : 0.2  
1.5 가 가

- REAR : 0.2  
4.5 가 가

- 가
- 가 가 가


x LEVEL

"TEST TONE" "ON"

- CENTER\*1 (0 dB): (-6 dB +6 dB , 1 dB )
- REAR\*1 (0 dB): (-6 dB +6 dB , 1 dB )
- SUBWOOFER\*2 (0 dB): (-10 dB +10 dB, 1 dB )

\*1 MHC-RV600D

\*2 MHC-GX90D RV800D

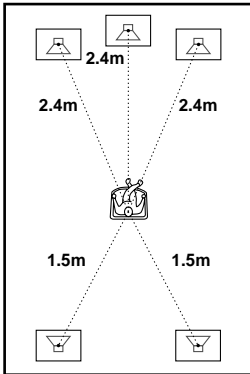



x BALANCE

“ ON ” “ TEST TONE ”

• FRONT ( 0 ): ( 6 ) .

• REAR ( 0 ) \* : ( 6 ) .

\* MHC - RV600D  
 x TEST TONE ( MHC - RV600D )  
 “ BALANCE ”

“ LEVEL ”

• OFF :

• ON :

“ SPEAKER SETUP ”

T.TONE

“ OFF ”

VOLUME ( ) .  
 VOL +/-

MHC - GX90D/RV800D/RV900D

- 1 DVD SETUP
- 2 M m “ SPEAKER SETUP ”  
ENTER
- 3 M m “ TEST TONE ” ENTER
- 4 M m ENTER “ ON ”
- 5 M/m / < / ,  
“ SIZE ” “ DISTANCE ” “ BALANCE ”  
“ LEVEL ”
- 6 ENTER
- 7 M m “ TEST TONE ” ENTER
- 8 M m ENTER “ OFF ”

( )

MHC - RV600D

1 DVD SETUP

2 M m  
"SPEAKER SETUP"  
ENTER

3 M/m /< /, "SIZE",  
"BALANCE" "LEVEL"

4 ENTER

가



DVD

DVD

(PCM, DTS), MPEG  
DVD DVD

CD VIDEO CD

가

.)

가

.(

MP3

1 DVD DISPLAY

가

2 v v ( M m )  
"AUDIO"  
ENTER

3 v v ( M m )

(DVD )

“ AUDIO ”

x DVD  
DVD  
4 가

(77 “ 가  
). DVD

5.1  
DVD

. DVD

x VIDEO CD CD

• STEREO :

• 1/L : ( )

• 2/R : ( )  
)


4 ENTER

가  
DISPLAY

DVD

AUDIO

“ AUDIO ”

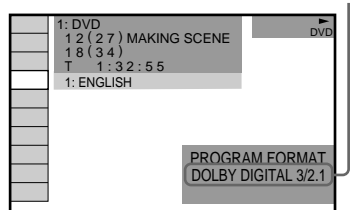

DVD/VIDEO CD/CD/MP3

\*“ PCM ”, “ MPEG ”, “ DTS ” “ DOLBY DIGITAL ”  
“ DOLBY DIGITAL ”

5.1 ch :

2

DOLBY DIGITAL 3/2.1

2 + LFE ( Low Frequency Effect : ) 1

• DVD

가

( )

- PCM ( )

PROGRAM FORMAT  
PCM 48kHz 24bit

- 

PROGRAM FORMAT  
DOLBY DIGITAL 2/0  
DOLBY SURROUND

- 5.1ch

PROGRAM FORMAT  
DOLBY DIGITAL 3/2.1

- DTS

PROGRAM FORMAT  
DTS 3/2.1



DVD

, VIDEO CD  
, CD

MP3

가

( )

1 DVD

2 DVD DISPLAY  
가

3 v v ( M m )

x DVD

“ TITLE ” “ CHAPTER ”  
“ TIME ”

x VIDEO CD

“ TRACK ” “ INDEX ”  
“ TIME ”

x CD

“ TRACK ”  
“ TIME ”

x MP3

“ ALBUM ” “ TRACK ”  
“ TIME ”

4 ENTER

“ \*\* ( \*\* ) ” 가 “ -- ( \*\* ) ”

가

5 v v ( M m )



CLEAR

(DVD )

DVD ( )

“ ANGLE ”

6 ENTER

( )

1 3 “ TIME ”

“ T \*\*: \*\*: \*\* ” ( )

1 DVD DISPLAY

가

2 M m “ ANGLE ”

가

가

2 ENTER

“ T \*\*: \*\*: \*\* ” 가 “ - : - : - : - ”

3 ENTER

가 “ - ”

3

ENTER

2 10

“ 2:10:20 ”

20

4

M/m

ENTER

가

DVD

DISPLAY

가

DVD

DISPLAY

ANGLE

가

• VIDEO CD PBC (27 )

DVD DVD 가



(DVD )

— /

DVD DVD  
DVD

가

1 DVD DISPLAY

.26

가

2 M m "SUBTITLE" ENTER

DVD

"SUBTITLE"

3 M m ENTER

가

SUBTITLE  
3 "OFF"

1

가 x

가 DVD  
DISPLAY

2 DVD DISPLAY

SUBTITLE  
가

가

3 M m "CUSTOM PARENTAL CONTROL" ENTER

• 3 가 4 가  
77


"CUSTOM PARENTAL CONTROL"

• DVD

4 M m " ON t "

ENTER

RETURN O 3

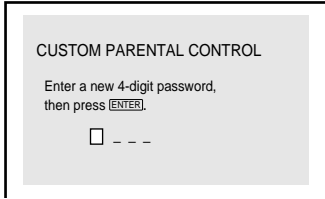

4 ENTER

RETURN O DVD DISPLAY 가

1 4 " OFF t "

ENTER

2 4 ENTER

1 4 M m " PASSWORD t "

ENTER


2 4 ENTER

3 4 ENTER

4 ENTER

x M m " PASSWORD t "

ENTER

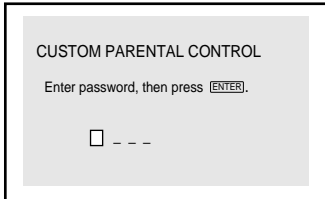

5 4 ENTER


" Custom parental control is set. "

ENTER <

( )

x


1  
 "CUSTOM PARENTAL CONTROL"  
 2 4  
 ENTER

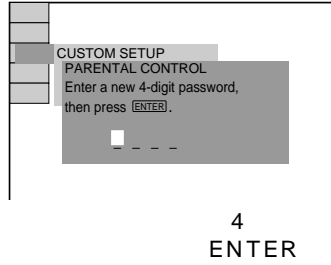

"CUSTOM PARENTAL CONTROL"  
 "199703"  
 4 6  
 ENTER



x

( )  
 (DVD )

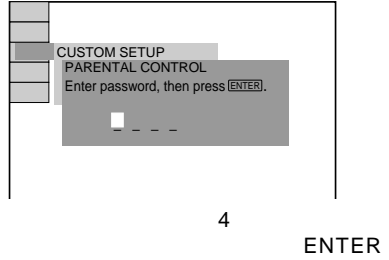


1 DVD SETUP  
 가  
 2 M m "CUSTOM SETUP"  
 SETUP " ENTER

"CUSTOM SETUP"  
 3 M m "PARENTAL CONTROL t"  
 ENTER

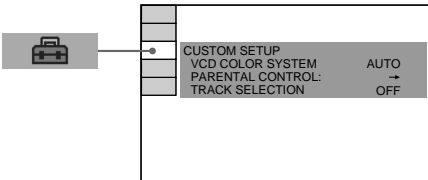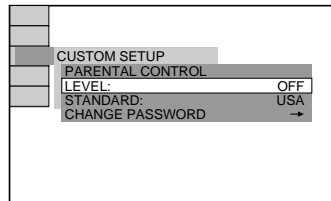




5 M m  
 “ STANDARD ”  
 ENTER  
 “ STANDARD ”

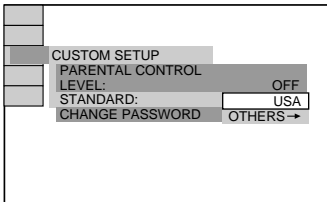


6 M m  
 ENTER  
 “ OTHERS t ”  
 42

7 M m  
 ENTER “ LEVEL ”  
 “ LEVEL ”

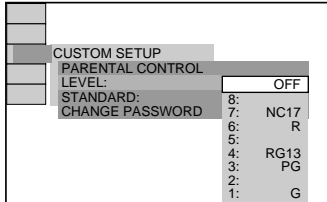

8 M m  
 ENTER

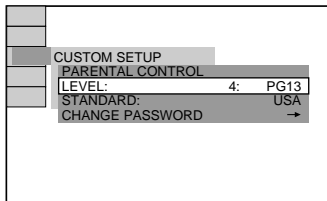

가 가

RETURN o  
 가

가 DVD  
 DISPLAY

DVD  
 8 “ LEVEL ” “ OFF ”

1 5 m “ CHANGE  
 PASSWORD t ”  
 ENTER

2 3

1 nN  
 “ PARENTAL CONTROL ”

2 4  
 ENTER

( )

“ ” 1 5  
ENTER “ 199703 ”  
4 . 3 4  
nN  
“ PARENTAL CONTROL ”  
• DVD  
• DVD  
가


	2376
	2379
	2390
	2543
	2115
	2109
	2489
	2363
	2362
	2057
	2070
	2499
	2086
	2149
가	2501
	2044
	2184
	2046
	2254
	2248
	2238
	2276
	2092
	2090
	2079
	2528
	2427
	2436
	2174
	2165
	2424
	2304
	2047
	2219



20 FM 10 AM

가

 가



1 TUNER/BAND "FM" "AM"

2 - + ( TUNING -  
+) 가

" TUNED "


" STEREO "(FM)가

" TUNED " 가

" 6 " 2

### 3 TUNER MEMORY

가  
1

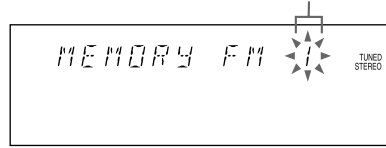

4 . > ( PRESET  
- +)

5 ENTER

6 1 5

1 TUNER/BAND "FM" "AM"

2 - + ( TUNING -  
+)

### 3 TUNER MEMORY

가  
1

4 . > ( PRESET  
- +)

5 ENTER

6 1 5



( )



가 “ ”

1  
.3  
> ( PRESET - +)

(43 “ ”

).

1 TUNER/BAND “ AM ” “ FM ”

2 . > ( PRESET - +)

AM ( ,  
)  
AM ( 9 kHz  
10 kHz)


. AM  
AM

ENTER

AM

AM

12

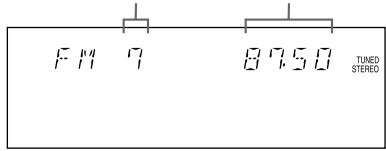

# ( RDS )

1 TUNER/BAND  
" AM "

2 - + ( )  
+)

" FM "  
TUNING -

( )

?  
( RDS )

가

• FM  
FM MODE

" MONO " 가

. RDS FM RDS  
\*

• - + ( )  
+ ) 가

TUNING -  
가 )

가 RDS RDS

• / /  
50 " " " "

( 48 ) " "

\* FM RDS

. RDS

• TUNER  
OSD 가

" DVD " 가

RDS

• " TUNER " BAND

TUNER/

FM  
RDS

RDS

DISPLAY

:  
\* t t \*

\* RDS

( ) (RDS) PTY  
PTY

(PTY)

“NO PTY”가

RDS

NEWS ( ),  
AFFAIRS ( ), INFO ( ),  
SPORT ( ), EDUCATE ( ),  
, DRAMA ( ),  
CULTURE ( ), SCIENCE ( ),  
, VARIED ( ),  
, POP M ( ), ROCK M ( ),  
, EASY M ( ),  
LIGHT M ( ), CLASSICS ( ),  
, OTHER M ( ),  
WEATHER ( ), FINANCE ( ),  
, CHILDREN ( ), SOCIAL ( ),  
RELIGION ( ), PHONE IN ( ),  
TRAVEL ( ), LEISURE ( ),  
JAZZ ( ), COUNTRY ( ),  
NATION M ( ), OLDIES ( ),  
FOLK M ( ), DOCUMENT ( ),  
TEST ( ), ALARM ( ),  
NONE ( ).

1 PTY

2 >

3 ENTER  
“PTY SEARCH”

가


4 >

5 ENTER

1 TAPE A/B A

2 Z PUSH

3 / A B

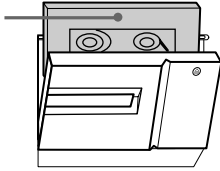

	x	.
	x	.
		.
	M	m
		.
	Z PUSH	.

TYPE I ( )

1  
2 DIRECTION  
g  
j \*1

"RELAY" ( ) \*2

3 hH ( nN )  
nN ( hH )

(AMS) \*


> 가 N  
"TAPE A ( TAPE B) >>> +1"

가 n  
"TAPE A ( TAPE B) <<< +1"

가 N  
"TAPE A ( TAPE B) <<< -1"

> 가 n  
"TAPE A ( TAPE B) >>> -1"

\* AMS (Automatic Music Sensor)

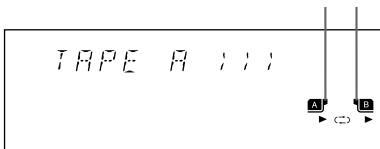

\*1 가

\*2

:  
t A ( ) t A ( )  
B ( ) t B ( )

AMS  
:  
4  
가

— CD / /

(DVD, VIDEO CD, CD, MP3),  
TYPE I ( )

	(CD )	/ /
1	B 가	
2	DVD	
3		( )
4	CD SYNC	REC PAUSE/START
	B 가 "REC" 가	
5	DIRECTION j ( RELAY) g	
6	REC PAUSE/START	REC PAUSE/START

x

• DVD CD

• TAPE A/B ( 1 B nN )  
hH ( )  
x  
• TAPE B



CD/MP3

VIDEO CD/

5 B ( , )

가 ( " DISC 1 " ) .


1 B 가

2 DVD



3 " PGM "

PLAY MODE

가

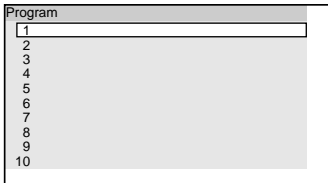

4 B ( , ) v ( M m ) v

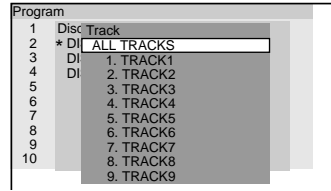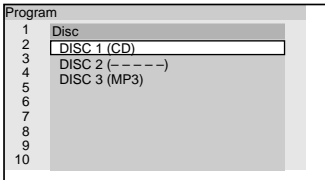

\* " ? " 가


6

" 10 "

v/v ( M /m )

" 10 "

ENTER

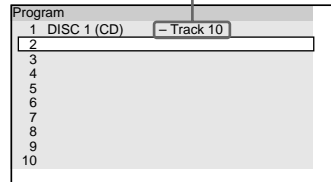

7

5

3

( )

8 CD SYNC  
B 가 hH

(

).

9  
DIRECTION

g

RELAY)

j (

10 REC PAUSE/START

“ 1 DISC ” “ ALL  
DISCS ” 가 PLAY  
MODE



(43

“

(16

“

” ).

1

(44

).

2

CLOCK/TIMER SET

“ DAILY 1 SET ”

3

v

v

(

M

m)

“ REC SET ”

ENTER

“ ON ”

가

4

v

v

(

M

m)

B

(

,

)

가

v

v

(

M

m)

ENTER

5 4

5”)

(

“ TUNER FM

6

B

가

7

?/1



( )

“ SURR ”

가

MUSIC EQ

---

ROCK

POP

JAZZ

DANCE

SOUL

ORIENTAL

---

MOVIE EQ

---

ACTION

DRAMA

MUSICAL

---

GAME EQ

---

ADVENTURE PlayStation 1, 2

ARCADE

RACING

---




( P FILE )

1 P FILE

가

2 b B ( < , )

v V ( M  
m )

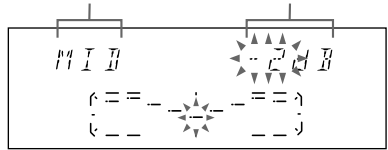

3 P FILE

가

4 P FILE

P FILE 1 - 3

5 ENTER

“ COMPLETE ” 가

3

---

P FILE

---

---

“ EFFECT OFF ”  
가 EFFECT  
ON/OFF

---



( MHC - GX90D RV800D )

ON/OFF

VOLUME ( VOL - + )



SURROUND

VIRTUAL\* t SURR ON t SURR OFF ( )

\*\* "VIRTUAL" 2ch 가 DVD

가



—

( ) ( )

DISPLAY 가

DISPLAY

: ( t ) \* t

\* . ?/1

—AM ( ,

—MD ( VIDEO )

—



PBC VIDEO CD (Ver. 2.0)

\* t

(8 )t

\*

DVD/CD-TEXT

MP3가

MP3

t

(8 )t

DISPLAY

• ID3

1

•

MP3

ID3

가

ID3

가

• ID3

Joliet

ASCII

ISO

ASCII

가

“( )

DVD

t

t

\* t

(8 )t

t

\* DVD TEXT

(

).

DVD

가

“NO

TEXT”가

PBC

CD

VIDEO CD

DISPLAY

t

t

(CD-TEXT

)t

(8 )t

DVD

\*1 t

\*2 t

(8 )t

VIDEO CD , CD MP3 x VIDEO CD (PBC )

\*1 t  
\*2 t (8

)t  
\*1 "RESUME"  
가 . (

\*2 DVD/CD-TEXT  
DVD/CD 가 ).  
"NO TEXT" 가 .  
MP3

가 .

1 DVD DISPLAY

가 .  
2 v v ( M m )  
"TIME" m )

ENTER .  
3 DISPLAY 가

x VIDEO CD (PBC )

• T \*\*:.\*\*

• T - \*\*:.\*\*

• D \*\*:.\*\*

• D - \*\*:.\*\*

x MP3


• T \*\*:.\*\*

• T - \*\*:.\*\*

가 DVD  
DISPLAY

.  
.

가 .

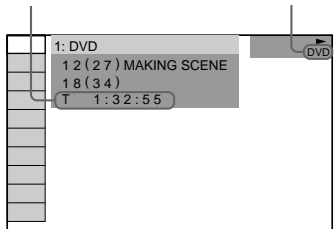

x DVD

• T \*\*:.\*\*

• T - \*\*:.\*\*

• C \*\*:.\*\*

• C - \*\*:.\*\*



—

“ ) (61 ”

GAME

- 
- GAME EQ가
- 

S-

S-

TV

—

1

2 GAME MIXING

:  
 MIXING LOW t MIXING MID t  
 MIXING HIGH t MIXING OFF  
 ( )

- GAME MIXING
- 

•

48 “ / /

GAME MIXING  
 PAUSE/START      ” 5 REC

- GAME MIXING  
GAME INPUT

• S-

S-

TV



: 가

(MHC-RV900D RV600D )

1 AMP MENU  
2 "PATTERN" 가 v v  
( M m )

3 b B ( < , )

PATTERN 1  
Y  
PATTERN 2\*  
Y  
PATTERN 3  
Y  
PATTERN OFF ( )

4 ENTER

\* "PATTERN 2" 가

가

1 MIC LEVEL MIN

2 MIC

3

4 MIC LEVEL

1 MIC LEVEL MIN

2 MIC

3 KARAOKE PON  
가

KARAOKE PON t MPX R\*1 t  
MPX L\*1 t \*2  
\*1 CD VCD  
\*2 KARAOKE PON  
CD 가  
"MPX R" "MPX L"

4

5 MIC LEVEL

1 AMP MENU  
2 "DIMMER" 가 v v  
( M m )

3 b B ( < , )

DIMMER OFF  
Y  
DIMMER 1  
Y  
DIMMER 2  
Y  
DIMMER 3

4 ENTER

:가 ( )

VIDEO CD DVD	TV
가	MIC LEVEL MIN MIC "m" KARAOKE PON*
*	ECHO LEVEL
	ECHO LEVEL MIN

- 가 가 가
- 가  
: 가  
- 가 가  
-가 가  
- 가
- 5.1CH DVD  
가 2CH
- 가 가  
"KARAOKE PON\*"
- KARAOKE PON\*
- MUSIC EQ, MOVIE EQ, GAME EQ  
EFFECT ON/OFF  
가 \*
- \* 가

- 1 " (1 5 ) 가  
B 가
  - 2 ( :DVD).  
TAPE A  
TAPE A가 TAPE  
A/B
  - 3 REC PAUSE/START  
B가  
"REC"가
  - 4 DIRECTION g  
j ( RELAY)
  - 5 REC PAUSE/START
  - 6 hH ( nN )
- x
  - ( ) 가  
가 가
  - DVD
  - 가  
) (



—

—

SLEEP

(

 
)

:


AUTO\* t 90 MIN t 80 MIN t  
70 MIN t ... t 10 MIN t OFF

\*


( 100 ).



SLEEP

 

SLEEP

 

“ SLEEP OFF ” 가  
SLEEP



(16 “

1

• : .

(20 “

• : .

• : .  
“ ” (44  
)

2

3

CLOCK/TIMER SET

“ DAILY 1 SET ”

4

v v ( M m )  
“ DAILY 1 ( 2 )  
SET ” ENTER

“ ON ” 가



( )

5

v v ( M m )

B ( , )

가

v v ( M m )

ENTER

가

6 5

7 v v ( M m )

:

TUNER	DVD PLAY
T	T
T	T
T	T

8 ENTER

(DAILY 1 , DAILY 2)

9 ?/1

---

CLOCK/TIMER

SELECT v

v ( M m )

(DAILY 1  
DAILY 2)

ENTER

---

1

---

CLOCK/TIMER

SELECT v

v ( M m )

"TIMER OFF",  
ENTER

---

15

• DAILY 1 DAILY 2

• 가 가

•

•

가



( )

C MD (VIDEO) IN ( )  
VIDEO (MD) IN ( )  
( MD ) VCR )

D MD (VIDEO) OUT ( )  
VIDEO (MD) OUT ( )  
( MD ) VCR )

E SUB WOOFER OUT (MHC-  
RV900D RV600D )  
( )

F DIGITAL OUT  
( , )

G COMPONENT VIDEO OUT  
TV ( )



MD

1  
61 " "

2 MD (VIDEO) \*

VCR

1  
61 " "

2 MD (VIDEO) \*  
MD (VIDEO) \* ?/1

" VIDEO " " MD " " VIDEO " MD  
(VIDEO) \*

• MD " MD " MD  
(VIDEO) \* ?/1  
" VIDEO " 가 " MD " " VIDEO "

• VIDEO CD " MD "

• MHC-RV900D ,  
RV800D RV600D " MD " ,  
MHC-GX90D " VIDEO "

\* MHC-GX90D VIDEO (MD)

MD

1  
61 “ ”

2

1  
61 “ ”

2

VIDEO CD

1 MD/VIDEO ( AUDIO ) OUT  
VIDEO OUT  
VCR

2

VIDEO CD MD  
MD VIDEO CD MD

1  
61 “ ”

2  
48 “ / / ”



가

가 가

가 Sony

“ ” 8 ) (13

• DISPLAY

“ - - : - - ” 가  
가

/ / 가

• 12 가

— 16 “ ” :

— 43 “ ”

“ ” 59 “ ” 50 “ ”

• VOLUME ( VOL + ).

• SPEAKER 가

• 가

nN ) . hH (

• TV VCR 가

TV VCR

MD ( VIDEO ) ( VIDEO ( MD ) )  
가

• MD ( VIDEO ) ( MHC - GX90D  
VIDEO ( MD ) )  
“ VIDEO ” 가 “ MD ”  
( 62 “ ” ) .

가

CLOCK/TIMER SELECT  
“ DAILY 1 ” , “ DAILY 2 ” , “ REC ” 가

•  
•

•  
•  
•



DVD/VIDEO CD/CD/MP3

가 가

TV  
TV 가 15 30  
TV

가 가  
가  
33 ). (31 ,

가  
( MHC - RV600D )  
가

DVD  
가

( MHC - RV600D )

( MHC - RV600D )  
가

+ -

가  
TV 가  
TV ( )  
DVD  
Game Mixing

가  
가  
가 가  
가 가  
가 가  
DVD 가 가

가  
“ PGM ” “ SHUF ”  
PLAY MODE  
x  
( 22 )  
, DVD PBC

DVD  
가

MP3

- ISO 9660 1 2 , Joliet
- MP3 ".MP3"
- 가 MP3
- MPEG 1 -3

MP3

- 
- : 가
- 가

- CD 가 ISO 9660 1, 2 Joliet
- ISO 9660 1, 2 CD
- ID3 가 ver. 1.0

- CD 가 ID3 가
- 

- 가 " LOCKED " 가
- Sony Sony
- Sony

- DVD
- 
- 
- TV (13).

- TV
- TV
- TV

- 가
- DVD 가 VCR
- DVD TV
- ( ) DVD TV S TV S (13)
- )
- TV (13)
- )

SETUP " " TV TYPE " " SCREEN

- 가 DVD
- S TV
- TV

- 가 " LANGUAGE SETUP " " OSD " (29)
- )

---

- DVD
- DVD

---

- DVD
- DVD
- DVD

---

- DVD 가
- DVD

---

가  
(69  
).

---

---

---

---

- 가 (70
- “ ” )
- 가

---

가

- 가 (70 )
- / 가 ”
- (70 )

---

- 가 / 가 ” (70 )

---

- 가 (70 “ 가 ” )
- 가 / 가 ” (70 )

---

---

---

---

“ TUNED ” “ STEREO ” ( )

- 가

---

FM

- “ MONO ” FM MODE

---



( )

---

• 64 .” “

• (61 ):

— 가.

— 가.

•

•

---

가

:

**1**

**2**

**3** x , ENTER , ?/1

**4** ?/1

DVD

. DVD



가

가

---

NO DISC

• 가

---

“ PROTECT ” “ PUSH POWER ” 가

• 가 . ?/1

가 ?/1

“ PROTECT ” “ PUSH POWER ”  
?/1

---

PUSH STOP

• PLAY MODE

---

READING

• TOC

---

WAIT

•

---

가 “ LOCKED ” 가

• Sony

 

• Sony

---



( / 가 )

( : C 13 00 ). 가

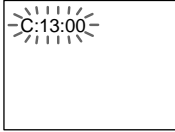

C 13 가 (70 )

C 31 가

E XX (XX 가 ) , 가 Sony Sony 5

: E 61 10

가 AC ( )

( )

가

• AC

— : 가  
— 가  
— 가  
—

( )

가

가

가 가



( )

가 가 가 가 가 가  
 . CD 90  
 . CD

가 가 가 가


가 Sony 10

CD CD  
 CD  
 ) ( , , ,



20 30

가

A B

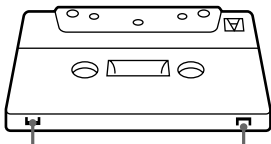

B A

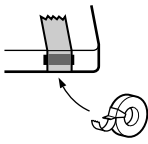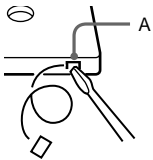

:  
 MHC - GX90D  
 RMS : ( )  
 : 60 + 60  
 (1 kHz 6 Ω, 10%  
 THD)  
 : 45 (1 kHz  
 8 Ω, 10% THD)  
 : 40 + 40  
 (1 kHz 6 Ω, 10%  
 THD)  
 : 55 (1 kHz  
 4 Ω, 10% THD)  
 0.07%  
 (1 kHz 6 Ω,  
 70 )

:  
 MHC - RV800D  
 DIN : 45 + 45  
 (1 kHz 6 Ω,  
 DIN)  
 : 33  
 (1 kHz 8 Ω,  
 DIN)  
 : 30  
 (1 kHz 6 Ω,  
 DIN)  
 : 38  
 (1 kHz 4 Ω,  
 DIN)  
 RMS : ( )  
 : 60 + 60  
 (1 kHz 6 Ω,  
 10% THD)  
 : 45 (1 kHz  
 8 Ω, 10% THD)  
 : 40 + 40  
 (1 kHz 6 Ω,  
 10% THD)  
 : 55  
 (1 kHz 4 Ω,  
 10% THD)  
 : ( )  
 : 120 + 120  
 (1 kHz 6 Ω,  
 10% THD)  
 : 90 (1 kHz  
 8 Ω, 10% THD)  
 : 80 + 80  
 (1 kHz 6 Ω,  
 10% THD)  
 : 110  
 (1 kHz 4 Ω,  
 10% THD)

:  
 MHC - RV900D  
 50/60 Hz AC 120 , 127 , 220 , 240V ,  
 RMS : ( )  
 : 100 + 100  
 (1 kHz 6 Ω, 10%  
 THD)  
 : 40  
 (1 kHz 8 Ω,  
 10% THD)  
 : 40 + 40  
 (1 kHz 6 Ω, 10%  
 THD)

MHC - RV600D  
 50/60 Hz AC 120 , 127 , 220 , 240V ,  
 DIN : ( ) 100 + 100  
 (1 kHz 6 Ω,  
 DIN)  
 RMS : ( )  
 : 100 + 100  
 (1 kHz 6 Ω,  
 10% THD)

MD/VIDEO (AUDIO) IN ( ) :  
 450/250 mV,  
 47 kΩ  
 GAME (AUDIO) IN ( ) :  
 250 mV,  
 47 kΩ  
 MIC ( ) ( ) :  
 1 mV,  
 10 kΩ

MD/VIDEO (AUDIO) OUT ( ) :  
 250 mV,  
 1 kΩ  
 VIDEO OUT ( ) :  
 1 Vp-p ,  
 ,  
 ,  
 75 Ω ,  
 S-VIDEO OUT (4 / DIN ) :  
 Y : 1 Vp-p ,  
 ,  
 C : 0.286 Vp-p ,  
 75 Ω

( )

COMPONENT VIDEO OUT :  
Y : 1 Vp-p , 75 Ω  
PB, PR : 0.7 Vp-p ,  
75 Ω

PHONES ( ) :  
8 Ω  
6  
16 Ω  
( MHC-RV600D ) :  
24 Ω  
( MHC-RV600D ) :  
24 Ω  
( MHC-GX90D RV800D ) :  
12

SUB WOOFER OUT ( MHC-RV900D ) :  
RV600D ) : 1 V ,  
1 kΩ

4 2  
40 - 13,000 Hz  
( ± 3 dB ), Sony  
TYPE I  
± 0.15% W.Peak  
( IEC )  
0.1% W.RMS ( NAB )  
± 0.2% W.Peak  
( DIN )

FM , FM/AM

FM

87.5 - 108.0 MHz  
FM  
75 Ω  
10.7 MHz

AM

: 530 - 1,710 kHz  
( 10 kHz )  
531 - 1,710 kHz  
( 9 kHz )

( DVD : λ=650 nm ,  
CD : λ=780 nm )

: 531 - 1,602 kHz  
( 9 kHz )  
531 - 1,602 kHz  
( 9 kHz )  
530 - 1,710 kHz  
( 10 kHz )  
AM

780 - 790 nm  
DVD  
( PCM 48 kHz ) :  
2 Hz - 22 kHz  
( ± 1 dB )  
CD : 2 Hz - 20 kHz  
( ± 1 dB )

450 kHz

NTSC, PAL  
CD OPTICAL DIGITAL OUT  
( )

660 nm  
- 18 dBm



MHC - GX90D RV800D  
 SS - RG90 3 , 3 , , ,  
 : 5 cm,  
 : 13 cm,  
 : 2 cm,  
 6 Ω  
 ( / / ) 200 × 325 ×  
 237 mm  
 3.0 kg

MHC - RV900D RV600D  
 SS - RV900 3 , 3 , , ,  
 : 13 cm,  
 : 13 cm,  
 : 5 cm,  
 6 Ω  
 ( / / ) 215 × 356 ×  
 260 mm  
 4.5 kg

MHC - GX90D , RV900D RV800D  
 SS - RS390 1 , 1  
 : 8 cm,  
 6 Ω  
 ( / / ) 165 × 95 × 99 mm  
 0.7 kg

MHC - GX90D , RV900D RV800D  
 SS - CT390 1 , 1 , , ,  
 : 8 cm,  
 8 Ω  
 ( / / ) 225 × 95 × 100 mm  
 0.9 kg

MHC - GX90D RV800D  
 SS - WG99  
 : 15 cm,  
 4 Ω  
 ( / / ) 210 × 325 ×  
 239 mm  
 3.5 kg

: 120 V AC, 60 Hz  
 : 230 V AC, 50/60 Hz  
 : 230 - 240 V AC,  
 50/60 Hz  
 : 120 V AC, 60 Hz  
 : 120 - 127 V, 220 V  
 230 - 240 V AC,  
 50/60 Hz  
 가  
 : 220 V AC, 50/60 Hz  
 : 220 V AC, 60 Hz  
 : 120 V, 220 V  
 : 230 - 240 V AC,  
 50/60 Hz  
 가

( )



MHC-GX90D 270  
 MHC-RV800D 270  
 0.25  
 ( )

MHC-RV900D 300  
 0.4  
 ( )  
 MHC-RV600D 230  
 0.4  
 ( )

MHC-GX90D/RV900D/RV600D  
 280 × 325 ×  
 368 mm  
 MHC-RV800D 280 × 325 ×  
 370 mm

MHC-GX90D 11.1 kg  
 MHC-RV900D 12.1 kg  
 MHC-RV800D 11.3 kg  
 MHC-RV600D 10.6 kg

: (1)  
 (2)  
 AM (1)  
 FM (1)  
 (1)  
 MHC-GX90D (14)  
 MHC-RV900D (10)  
 MHC-RV800D (14)  
 MHC-RV600D (8)  
 (MHC-RV600D)  
 (2)

DVD

PBC

VIDEO CD

DVD

가

MP3

CD

DVD

가

(CD) /  
VIDEO CD

(VIDEO CD)

CD

가  
가

VIDEO CD

가  
(

nN )

CD  
hH

가

CD , VIDEO CD

가

MP3

DVD



VIDEO CD  
CD



MP3



PBC

“ ”

VIDEO CD (27

(PBC)

VIDEO CD (

2.0) 가

. PBC

VIDEO CD

Dolby Digital

Pro Logic Surround

Dolby

가

. DVD

DVD

가

( 0.1 가 ) “ 5.1 ”

“ ”

가  
. DVD

가

가

가

DVD

DTS  
DTS  
Inc.

Digital Theater Systems ,

5.1

DVD

가  
;

가

. DTS  
5.1  
가

( )

DVD  
 CD 8  
 / DVD  
 4.7 GB ( 가 ) CD 7  
 . 8.5 GB / DVD  
 DVD 9.4 GB /  
 DVD 17 GB .  
 MPEG 2  
 1/40 . DVD  
 가 .  
 PCM  
 DVD , .

VIDEO CD  
 가  
 .  
 VIDEO CD  
 MPEG 1  
 .  
 120  
 12 cm VIDEO CD .  
 74  
 .  
 VIDEO CD  
 .  
 가  
 . VIDEO  
 CD 6 .  
 VIDEO CD 가  
 :  
 1.1 (PBC VIDEO  
 CD):  
 .  
 2.0 (PBC VIDEO  
 CD):  
 .  
 PBC  
 .  
 가  
 .

29 , 35 38  
ISO 639 : 1988 ( E/F )

1027	Afar	1186	Scots Gaelic	1350	Malayalam	1513	Siswati
1028	Abkhazian	1194	Gallician	1352	Mongolian	1514	Sesotho
1032	Afrikaans	1196	Guarani	1353	Moldavian	1515	Sundanese
1039	Amharic	1203	Gujarati	1356	Marathi	1516	Swedish
1044	Arabic	1209	Hausa	1357	Malay	1517	Swahili
1045	Assamese	1217	Hindi	1358	Maltese	1521	Tamil
1051	Aymara	1226	Croatian	1363	Burmese	1525	Telugu
1052	Azerbaijani	1229	Hungarian	1365	Nauru	1527	Tajik
1053	Bashkir	1233	Armenian	1369	Nepali	1528	Thai
1057	Byelorussian	1235	Interlingua	1376	Dutch	1529	Tigrinya
1059	Bulgarian	1239	Interlingue	1379	Norwegian	1531	Turkmen
1060	Bihari	1245	Inupiak	1393	Occitan	1532	Tagalog
1061	Bislama	1248	Indonesian	1403	(Afan) Oromo	1534	Setswana
1066	Bengali; Bangla	1253	Icelandic	1408	Oriya	1535	Tonga
1067	Tibetan	1254	Italian	1417	Punjabi	1538	Turkish
1070	Breton	1257	Hebrew	1428	Polish	1539	Tsonga
1079	Catalan	1261	Japanese	1435	Pashto; Pushto	1540	Tatar
1093	Corsican	1269	Yiddish	1436	Portuguese	1543	Twi
1097	Czech	1283	Javanese	1463	Quechua	1557	Ukrainian
1103	Welsh	1287	Georgian	1481	Rhaeto-Romance	1564	Urdu
1105	Danish	1297	Kazakh	1482	Kirundi	1572	Uzbek
1109	German	1298	Greenlandic	1483	Romanian	1581	Vietnamese
1130	Bhutani	1299	Cambodian	1489	Russian	1587	Volapük
1142	Greek	1300	Kannada	1491	Kinyarwanda	1613	Wolof
1144	English	1301	Korean	1495	Sanskrit	1632	Xhosa
1145	Esperanto	1305	Kashmiri	1498	Sindhi	1665	Yoruba
1149	Spanish	1307	Kurdish	1501	Sangho	1684	Chinese
1150	Estonian	1311	Kirghiz	1502	Serbo-Croatian	1697	Zulu
1151	Basque	1313	Latin	1503	Singhalese	1703	
1157	Persian	1326	Lingala	1505	Slovak		
1165	Finnish	1327	Laothian	1506	Slovenian		
1166	Fiji	1332	Lithuanian	1507	Samoan		
1171	Faroese	1334	Latvian; Lettish	1508	Shona		
1174	French	1345	Malagasy	1509	Somali		
1181	Frisian	1347	Maori	1511	Albanian		
1183	Irish	1349	Macedonian	1512	Serbian		

---

---

DISC

---

TITLE (DVD ) (DVD), (PBC VIDEO CD),  
SCENE (PBC (VIDEO CD CD) (MP3)  
VIDEO CD )  
TRACK (VIDEO CD  
CD)  
ALBUM (MP3 )

---

CHAPTER (DVD ) (DVD) (VIDEO CD CD)  
INDEX (VIDEO CD  
CD)

---

TRACK (MP3 )

---

TIME

---

AUDIO (DVD/VIDEO CD/  
CD )

---

SUBTITLE (DVD )

---

ANGLE (DVD )

---

PLAY MODE ( / / )

---

REPEAT ( / ) / /  
/

---


CUSTOM PARENTAL  
CONTROL

---


• DVD DISPLAY :

• "OFF" ("REPEAT" )  
"ANGLE"


## LANGUAGE

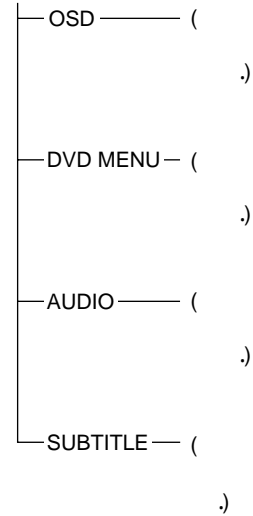

## SCREEN

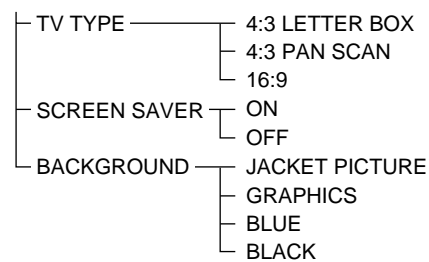


## CUSTOM

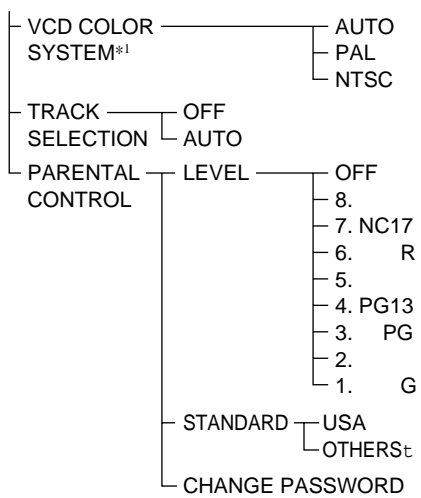

\*1

( )

SPEAKER

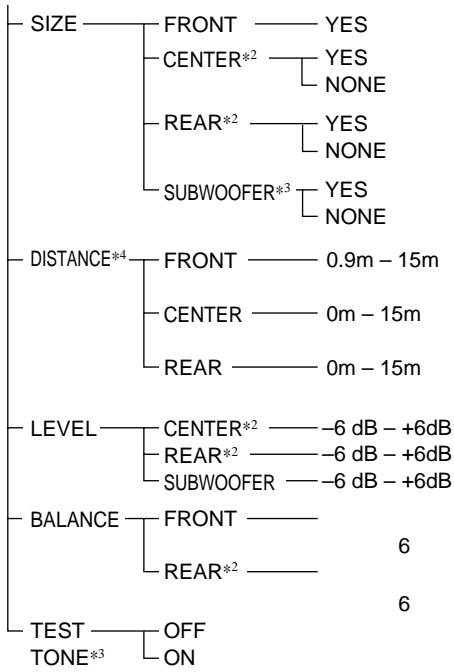

RESET

- YES

\*2 MHC - RV600D

\*3 MHC - RV900D RV600D

" YES "	" NONE "	MHC -
GX90D	RV800D	" YES "

\*4 SPEAKER " DISTANCE "

가 OSD